


Occupancy Sensor - Ceiling Mounted

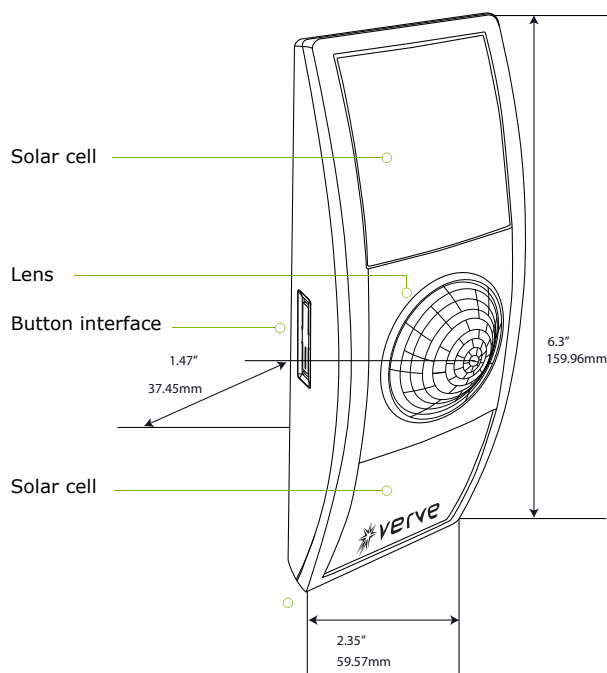

Package Contents

- Occupancy Sensor
- 2 screws, 2 wall anchors
- Wire bracket

Tools Required

- Power drill, 3/16" bit
- Screwdriver
- Light meter
- Battery (CR2032) for testing

Product Description

The Verve ceiling-mounted Occupancy Sensor saves energy and adds convenience by accurately detecting when an area is occupied or vacant.

It is a wireless, solar-powered sensor that detects occupancy using passive infrared (PIR) heat and motion sensing. The sensor transmits RF messages to Verve lighting, HVAC, and outlets to use energy more efficiently.

Features Include:

- Sends wireless messages to other devices whenever motion is detected
- Harvests ambient solar energy to power the sensor and wireless communication
- Mounts easily on any ceiling material
- Works with other sensors for enhanced occupancy tracking
- Built-in tests to confirm operation at installed location
- Supplemental battery option for extreme low-light failover

Specifications

Power Supply	Solar harvesting supplemental battery option
Transmission Range	80 ft. (25 m)
Radio Frequency	315 MHz
Light Required to Maintain Operation	15 lux for 6 transmissions/hour 50 lux for 30 transmissions/hour 100 lux for 60 transmissions/hour
Charge Time to Startup	1 minute @ 15 lux 5 seconds @ 200 lux
Charge Time to Fully Charge	3 hours @ 200 lux (after startup) 6 hours @ 200 lux (cold start)
Fully Charged Operating Life in Darkness	48 hours
Dimensions	2.36" H x 6.3" W x 1.43" D (60mm x 160mm x 36mm)
Weight	4.4 oz. (125 g)
Environment	<ul style="list-style-type: none"> • Indoor use only • 14° to 131°F (-10° to 55°C) • 20% to 95% relative humidity (non-condensing)
Agency Compliance	FCC and I.C.

1 Planning

Take a moment to plan for the sensor's successful operation and optimal communication with other system components.

Remove the sensor from its packaging and place it in a strong light to provide the required startup charge.

Tip: To quickly ensure the sensor energy storage is fully charged, insert a CR2032 battery for 30 seconds.

- Ensure the location provides consistent and adequate light
- Locate the sensor in the center of the room with an unobstructed view of the space
- Avoid installed near ceiling fan or hanging fixtures
- Consider the area's traffic patterns and principal use, for example, walking, lounging or sleeping
- Confirm a location is suitable by temporarily mounting the sensor and testing it, see Walk Test and Light Test sections
- Consider the construction materials in the space and obstacles that may interfere with RF signals

Sensor Range


A single occupancy sensor provides sufficient coverage for most applications.

Note: For some applications, multiple sensors may be required to provide complete coverage.


For detailed information, see the *Verve System Planning Guide* at www.vervelivingsystems.com.

Coverage Diagrams

Top View

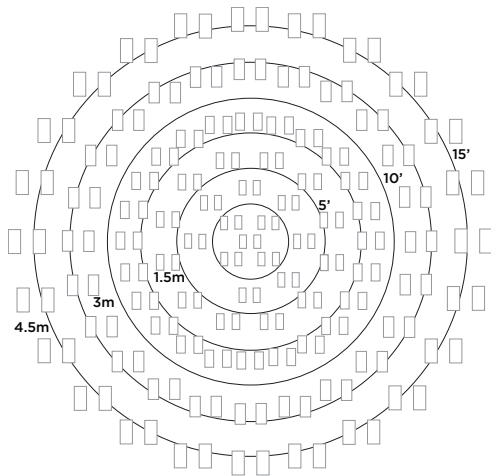

Side View

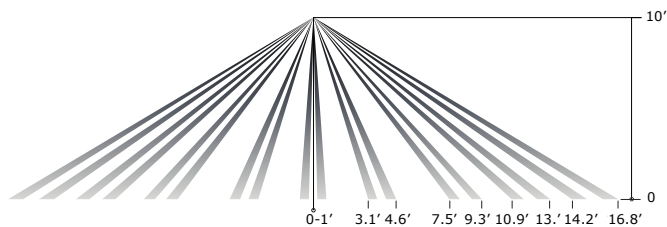

Tip: To provide coverage for very high ceilings, a wall sensor can be incorporated in the plan for complete coverage.

2 Installing

estimated time: 20 minutes




The occupancy sensor can be mounted on most ceilings with the provided screws, or mounted on dropped ceilings, using the provided wire bracket.

1. Decide where you want to install the occupancy sensor.
Tip: For visual alignment, orient the sensor parallel to one of the walls.
2. Remove the mounting plate from the sensor.
3. Decide which of the two installation options is appropriate.

Screw Mounting Plate to the Ceiling

- a. Hold the mounting plate in place on the ceiling and use a pencil to lightly mark two small dots for the screw drill points.
- b. Drill two holes with a 3/16" drill bit and insert the wall anchors.

- c. Insert the first screw loosely and level the mounting plate.
- d. Insert the second screw and then hand-tighten the first screw.

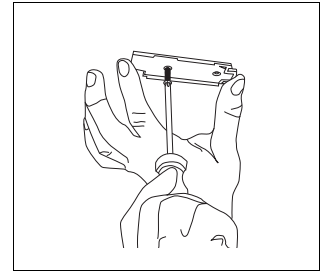


Mount Using the Wire Bracket


- a. Remove the ceiling tile where you want to mount the sensor.
- b. Place the mounting plate squarely on the ceiling tile and use the wire to mark two points for the holes.
- c. Punch two small holes through the ceiling tile at the marked points.

- d. Insert the wire bracket through the two holes in the mounting plate.


Make sure the ends are roughly even.

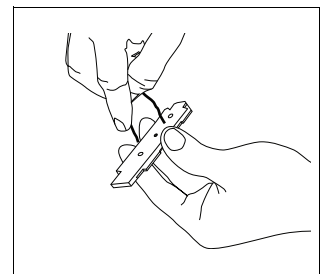

- e. Feed the wires through the holes in the ceiling tile.

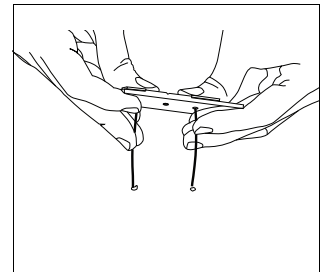


- f. On the front of the ceiling tile, flatten the wire bracket so it is snug against the mounting plate.

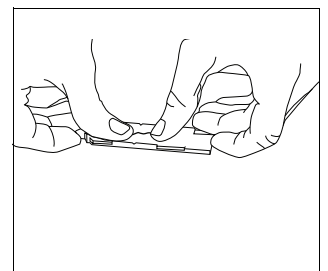

- g. On the back of the ceiling tile, twist the wires together to hold the mounting plate securely.


- h. Replace the ceiling tile.

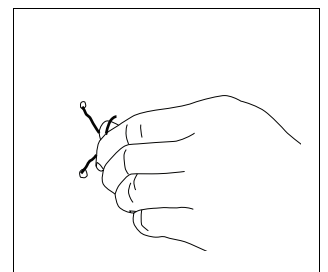

4. Attach the sensor to the mounting plate.

With the 2-button interface facing you, slide the sensor to the left on the mounting plate until it snaps into place.

Note: It may be easier to link the sensor before it is mounted on the ceiling. See the Linking section.

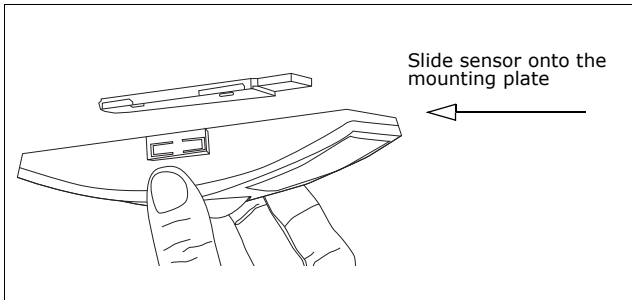

5. Confirm the sensor is properly positioned to detect motion and has sufficient light to operate, see the Walk Test and Light Test sections.

3 Linking

Verve wireless systems are highly flexible; two or more compatible devices can be linked and configured to provide the desired control.

There are two basic types of devices in the Verve system; transmitters and transceivers.

- **Transmitters** are simple energy-harvesting devices that send RF messages to communicate a condition, level, or state. Transmitters can only be linked to transceivers.
- **Transceivers** are wire-powered controlling devices that send as well as receive RF messages. They also process relevant control logic, and actuate the appropriate outputs (switching a light on or off for example). Transceivers can be linked to transmitters as well as other transceivers. A Verve transceiver can have up to 30 devices linked to it.

The Occupancy Sensor is a Transmitter

To link devices, the transceiver must first be powered, within the transmission range, and set to accept links using the 2-button interface on the transceiver.

Next, the desired transmitter, or another transceiver, is triggered to send a special link message. The awaiting transceiver receives and stores the link permanently so the devices can interact to provide a variety of intelligent control options.

For detailed information on Verve system capabilities and options, see the *Verve System Planning Guide* at www.vervelivingsystems.com.

To link the sensor to a transceiver:


Note: If the sensor is the only device linked to the transceiver, Auto-On and Off will be enabled.

1. Set the desired transceiver to Accept a Link.

2. Click the Menu button on the side of the sensor once.

Note: The button interface on the sensor is used for linking and testing only. The occupancy timer settings are configured on the transceiver to which the sensor is linked.

The Set LED on the transceiver displays solid green for 3 seconds, if the link was successfully established.

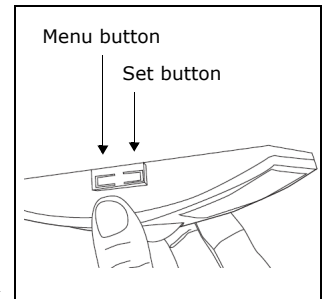

Testing the Sensor

Before starting a test, ensure the sensor's energy storage is fully charged by placing it in a strong light (200 lux) for 20 minutes or insert the battery for 30 seconds.

If a battery is used to charge the sensor for a light test, ensure it is removed to get an accurate light measurement.

A test mode will stay active for 3 minutes. To exit a test and resume normal operation, press and hold the Menu button for 5 seconds.

Walk Test

Use the walk test to confirm the sensor's sensitivity to motion within its range.

1. Press and hold the Set button for 5 seconds.
The red LED will blink to confirm that a walk test is active.
2. Move in and out of the sensor's range to determine its coverage area.
The sensor will blink when it detects motion.
3. Make small hand movements just inside the limit of the sensor's range to see if the motion triggers a response.

Light Test

Use the light test to measure real-time light levels and confirm whether the occupancy sensor has sufficient light.


1. Create a realistic lighting condition (the test measures the real-time light level).
2. Press and hold the Set button for 10 seconds.
The red and green LEDs will blink to confirm that a light test is active.
3. Watch the LED blink rate to determine the light strength.
The highest is 5 blinks which indicates very good light (200 lux or more). 1 blink indicates minimum light (15 lux).

Note: If there is no blink rate, consider relocating the sensor or installing a battery to provide supplemental power.

Installing Supplemental Battery (optional)

If light levels are very low where the sensor is installed, auxiliary battery power (CR2032) can be used to supplement the solar energy harvester.

1. Remove the sensor from the mounting plate.
With the 2-button interface facing you, slide the sensor to the right.
2. Turn the sensor over and identify the battery holder on the circuit board.

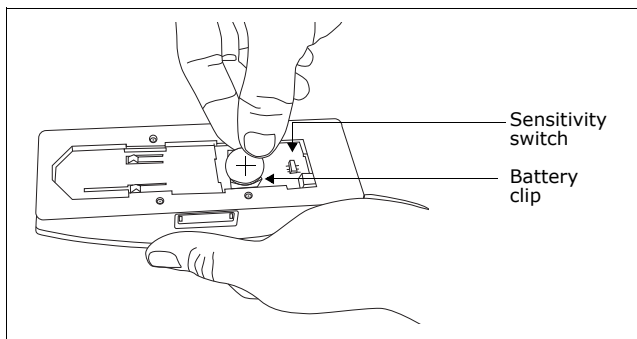

3. Insert the battery under the clip with the positive pole (+) up and press it in place.
4. Remount the sensor on the mounting plate.

Troubleshooting

Problem	Solution Checklist
The sensor does not generate a wireless message	<ul style="list-style-type: none"> • Verify the LED blinks when motion is detected • Verify the solar cell is charged properly
The sensor is activated when there is nothing to detect	<ul style="list-style-type: none"> • Verify there is 4 ft. (1.2m) clearance from heat sources that may disturb sensing • Reduce the sensitivity setting by moving the switch on the back of the sensor to the left-hand position
The linked device does not respond to wireless messages	<ul style="list-style-type: none"> • Check for environment or range issues • Verify the device is linked • Check the transceiver connection and the wiring for errors • Check if appropriate devices are linked according to good system planning



FCC SZV-STM300C
I.C. 5713A-STM300C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Verve™ Products Limited Warranty. Subject to the other terms of this warranty, Liberty Hardware Mfg. Corp. ("Liberty Hardware") warrants you the original purchaser that this Verve™ product will be free from defects in material and workmanship for five years from the date of your purchase of the product. During that period, if the product does not comply with this limited warranty, Liberty Hardware will, at its discretion, repair or replace the product. Repair or replacement is your sole remedy under this or any other warranty of the product, whether express or implied.

Coverage Limitations. This limited warranty extends only to the original purchaser and is not transferable. This limited warranty expressly excludes any defects or damages resulting from any product installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner.

Instructions for Warranty Service. To obtain warranty service return the Verve™ product, a description of the problem, together with your proof of purchase, securely packaged and with postage prepaid, to:

Liberty Hardware Mfg. Corp.

Attn: Customer Service - Verve Living Systems

140 Business Park Drive

Winston Salem NC 27107

You may be required to provide other information or evidence of the defect. Any returned product that is replaced becomes the property of Liberty Hardware.

Implied Warranties. TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE SAME DURATION AS THIS EXPRESS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. NO OTHER EXPRESS WARRANTY HAS BEEN MADE OR WILL BE MADE BY LIBERTY HARDWARE MFG. CORP. WITH RESPECT TO THIS PRODUCT.

Limitation of Liability. LIBERTY HARDWARE SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUCH AS THE COST OF LABOR FOR REMOVAL OR REINSTALLATION OF THE PRODUCT, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, TORT, OR OTHERWISE. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion and limitation may not apply to you.

If you have any questions about this warranty, contact us at 1-877-874-8774.

This limited warranty gives you specific legal rights, and you also may have other rights which vary from state to state. In Canada, the above provisions are not intended to operate where prohibited by law and do not preclude the operation of any applicable provisional consumer protection statute which in certain circumstances may extend the express warranties herein.

