

Installation instructions

Instructions de montage







Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje


Monteringsanvisning

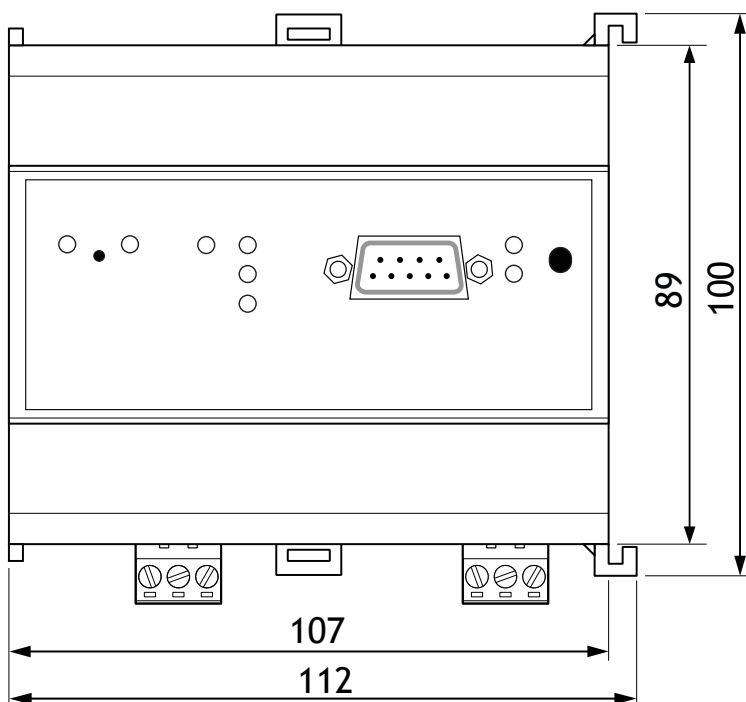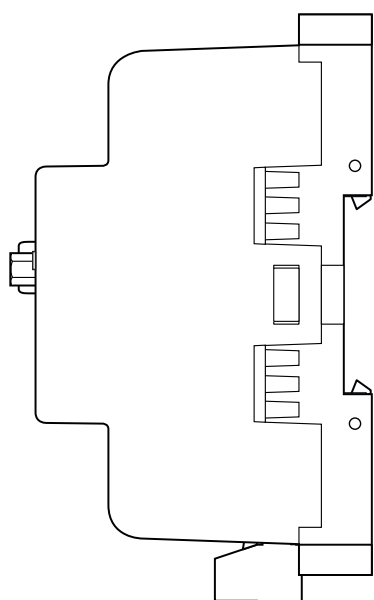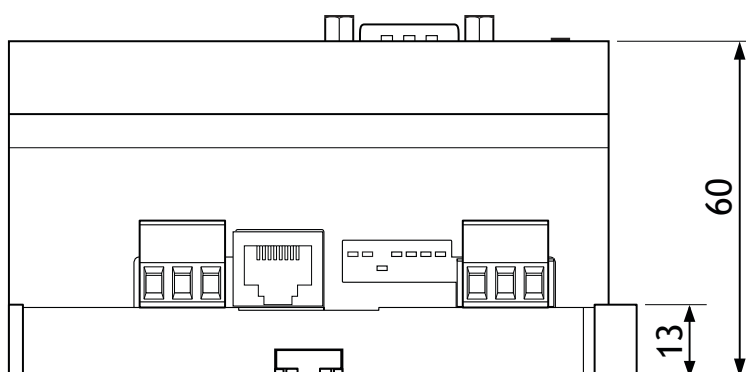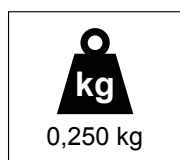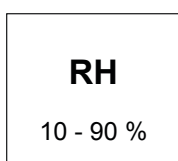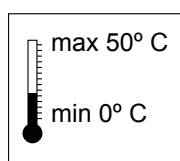


35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

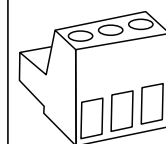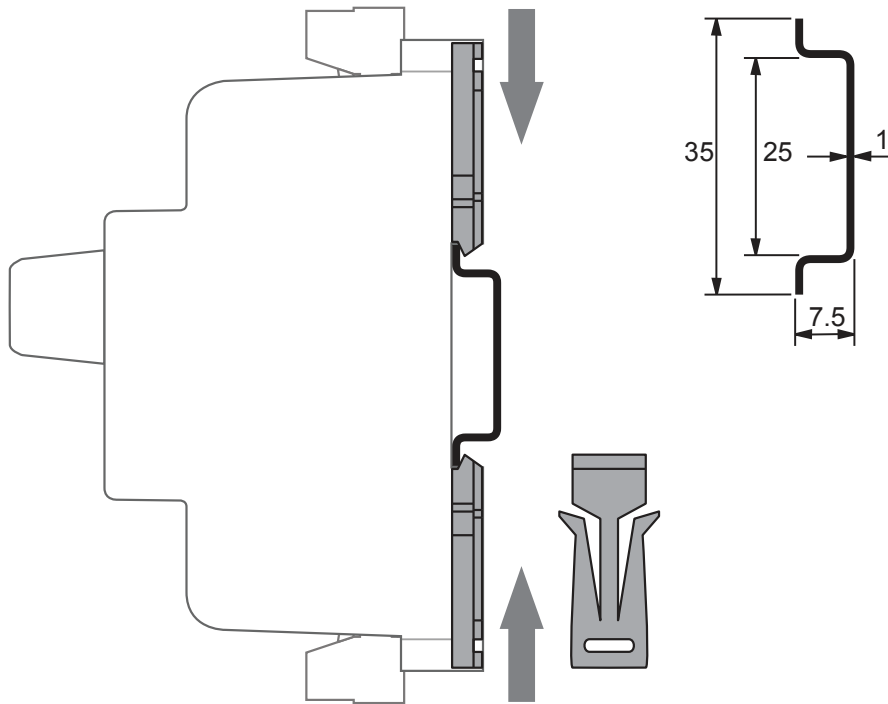

 Weidmüller
BLZP 5.08/03/180
0.2 - 2.5 mm²



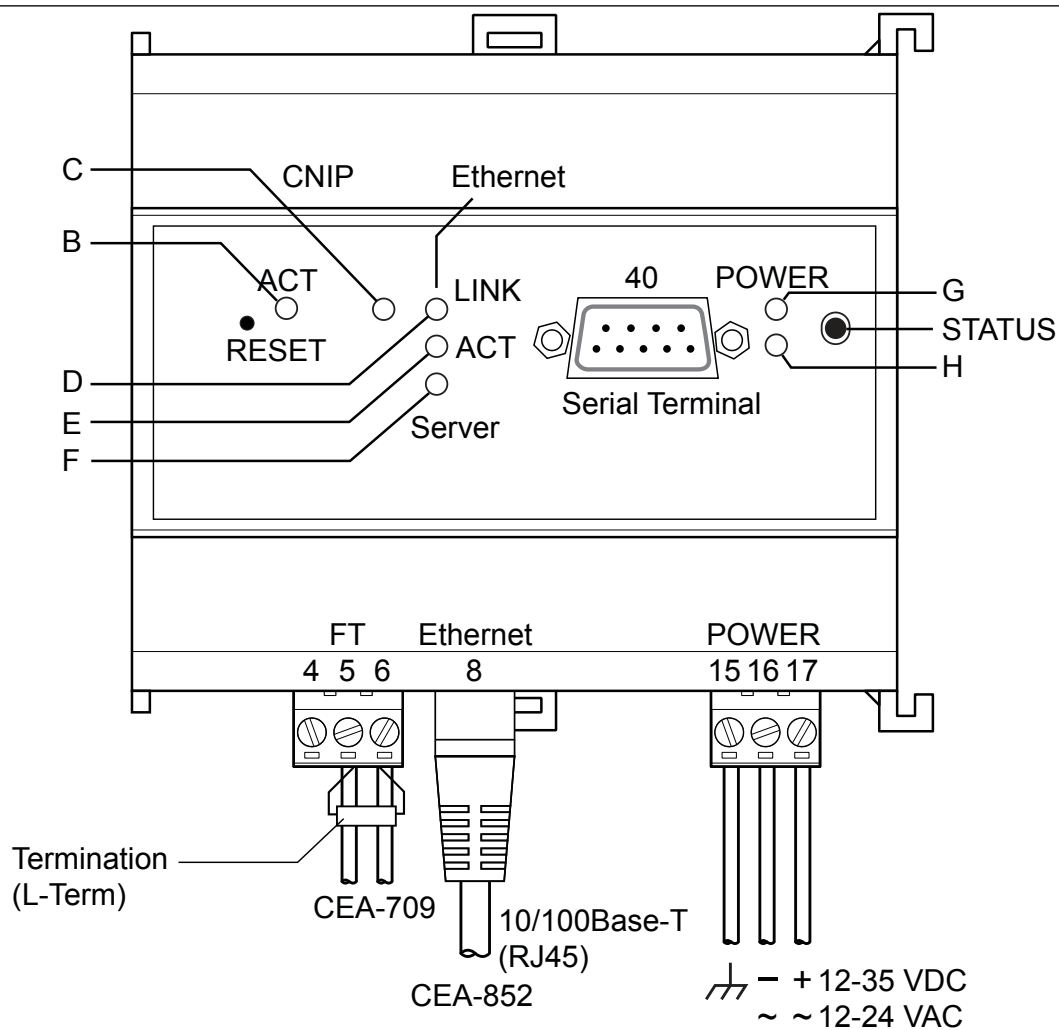

Connectors

CEA-709	4	Input EARTH GND port 1
	5	Input B port 1
	6	Input A port 1
Ethernet	8	10/100Base-T (RJ45)
POWER	15	Power supply input EARTH GND
	16	Power supply input MINUS
	17	Power supply input PLUS  Do NOT connect to EARTH GND
SERIAL	40	EIA-232 (DB9 male)

Buttons

RESET	Reset
STATUS	Send service pin message

Status LEDs

B	Green flashing fast	Traffic on port 1
	Green flashing at 1 Hz	Port not commissioned
	Red permanent	CEA-709 port damaged
C	Red flashing fast	Traffic overload on port 1
	Green	IP port is fully functional
	Yellow	IP port functional but config. is not up-to-date
D	Red	IP port is non-functional
	Flashing at 1 Hz	IP port is not commissioned
	OFF	IP port is not active
E	Green	Ethernet link
F	Green flashing	Ethernet traffic
G	Green	Config. server enabled
H	Green	Power
	OFF	Normal operation

<http://192.168.1.254>
 User: admin
 Password: loytec4u

