

AutoPhos APDAS Addressable Switch Network Port, Jumpers, and Wiring Data Sheet

Make all connections before applying power to the AutoPhos controller main board. Connect the network of switches to the AutoPhos controller port marked DDN/CAN and set the jumper to DDN (upper 2 pins) as shown in picture below. Remove terminal block to view PCB markings designating pins "24, L, H, and G". The AutoPhos controller can be used to loop power up to 8 two button AutoPhos Addressable Switch Network switches or up to 16 one-button AutoPhos Addressable Switch Network switches. For higher quantities of switches, use the optional **SLS-24-024T** 24VDC auxiliary power supply.

